NDMI)
Bharat Unnat Chulha (Low Smoke Biomass Sto Model No : SPFM_0414N
UID No. :
Date of Purchase :
Place of Purchase :

Dealer / Distributor's Contact Details :

Consumer's Name & Address :
Tel





Dealer / Distributor's Stamp

\*Warranty card duly filled has to be produced while claiming for any damage or repair without which the warranty will be considered null and void.

### मेन्ट्रेनेन्स और सेवा :

- क. यदि ज्वलन कक्ष में दरारे आ जायें, जो चल्हे को अधिक नकसान से बचाने के लिए चल्हे का उपयोग करना बन्द कर दें।
- ख. वारंटी अवधि के दौरान या बाद में सेवा प्राप्त करने के लिए एन.डी.एम.आई. निर्माण केन्द्र या एन.डी.एम.आई. स्थानीय वितरक से सम्पर्क किया जा सकता है।

### कार्यक्षमताः

- क. 65% लकड़ी की बचत।
- ख. कार्बन मोनो ऑक्साइड और अन्य खतरनाक उत्पर्जन कम कर देता है।

### चेतावनी :

- क. चुल्हा 3-4 घंटे प्रतिदिन से अधिक इस्तेमाल के लिए नहीं बना है। अतिप्रयोग के कारण चल्हा 1 साल के भीतर ही खराब हो सकता है। ऐसी परिस्थिति में चल्हे की मरम्मत का दावा वारंटी पॉलिसी के आधार पर नहीं किया जा सकता।
- ख. यह चुल्हा अल्प शारीरिक, मानसिक या संवेदी क्षमताओं या अनुभव एवं ज्ञान के अभाव वाले व्यक्तियों (बच्चों सहित) द्वारा उपयोग के लिए नहीं है, जब तक कि उन्हें उनकी सरक्षा के लिए जिम्मेदार व्यक्ति द्वारा उपकरण से सम्बन्धित निगरानी या निर्देश न दिया गया हो।

### परिचालन निर्देश :

- क. सबसे पहले लकडी धारक को चल्हे के सामने दिये गये छेट में डालें।
- अब मिट्टी के तेल में शुष्क लकड़ी के ट्कड़ों की नोक डुबायें और लकडीधारक पर रख दें। यदि मिटटी का तेल उपलब्ध नहीं है, तो कागज के ऊपर कुछ टहनियों को डालकर माचिस की तीली से आग
- (ग) आग लगाने के 5 मिनट पश्चात फैन ऑन कर दें।
- शुरूआत में आग लगाते समय 30 X 30 मि.मी. (कितनी ही लम्बाई की) लकडी के ट्कडे इस्तेमाल करें। अच्छी तरह आग लग जाने पर 50 X 50 मि.मी. तक की लकड़ियों का भी इस्तेमाल किया जा सकता है।
- शरूआत में आग लगाते समय थोडा धआं हो सकता है। कछ ही समय के बाद धंआ घट जाने पर चुल्हे पर बर्तन रखा जा सकता है।
- जब आंच धीमी होने लगे तो ईंधन के कुछ ट्कडे डालें। धुंए और कालिख से बचाव के लिए एक साथ बहत सारे लकडी के टकडे न डालें।
- जब आग की जरूरत न हो तो लकडी डालना रोक दें, कुछ समय बाद आग बझ जायेगी।
- हैंडल को पकडकर चुल्हे को 45 डिग्री झकायें और राख बाहर

### महत्वपूर्ण मिर्देशः

- क. चुल्हा एक सपाट सतह पर रखें।
- ख. खाना पकाते समय चुल्हे की बाडी (सिवाय हैंडल) के कदापि न छुएँ।
- ग. चल्हा बच्चों की पहँच से दर रखें।
- घ. चल्हे के आसपास ज्वलनशील वस्त्/सामग्री न रखें।
- ङ. चुल्हे की बाहरी सतह और ज्वलन कक्ष की सफाई के लिए पानी का उपयोग न करें।
- च. संचालन करते समय एक सुरक्षित दूरी पर बैठें।
- छ. चल्हा हवादार कमरे में ही इस्तेमाल किया जाना चाहिए।






भारत उन्नत चूल्हा (धूम्ररहित बायोमास चूल्हा) मॉडल संख्या : SPFM 0414N



**USER MANUAL** & WARRANTY CARD

# **USER MANUAL**

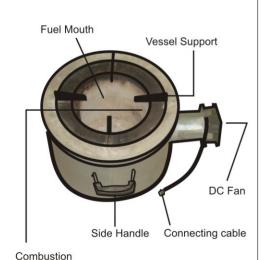

# **SPFM\_0414N**

Chamber

# **Important Instructions:**

- a. The stove should be kept on a flat surface.
- b. The stove body (except the handles) should not be touched while cooking.
- c. Keep the stove out of reach of children.
- d. Do not keep inflammable articles/ materials around the stove while using it.
- e. Do not use water for cleaning the combustion chamber as well as the outer body of the stove.
- f. Sit at a safe distance while operating.
- g. The stove should be used in well ventilated areas.

# **Operating Instructions:**

- a. Initially, put the grate inside the stove through the front opening provided.
- b. Nowdipthetip of the dry wood pieces into kerosene and stack them on top of the grate. If kerosene is not available, kindling can be done by putting paper and some twigs on top of the wood.
- c. Put on the Fan after 5 Mintes of buring stove
- d. For initiating fire a 30 mm x 30 mm wood piece irrespective of the length is recommended. After the initial ignition, a maximum size of about 50 mm x 50 mm wood piece can also be
- e. During kindling there will be a little amount of smoke, but after that the smoke dies down and the pot can be placed for cooking.
- f. As the flame lowers, put some amount of fuel. Do not stack too many wood pieces at a time to avoid smoke and soot.
- g. When the fire is not required, stop adding fuel. The fire dies down after a certain period of time.
- h. Remove the ash by tilting the stove at 45° using the handles.

## Maintenance and service

- a. Do not use the stove if the combustion chamber cracks to avoid further damage to the stove. Get the combustion chamber replaced immediately.
- b. Service during and after the warranty period can be obtained at the NDMI's manufacturing centre or you can contact your local NDMI distributor.

## Performance:

- a. Saves wood upto 65%
- b. Reduces carbon monoxide and other harmful emissions.

## Warning

- a. The stove is intended for a normal cooking cycle of about 3-4 hours a day. Over use of the stove will result its damage before 1 year which would not be liable for claim under the warranty policy.
- b. The stove is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person

# **Warranty Details:**

Navdurga Metal Industries, herein after referred to as NDMI, assures the SPFM 0414N Stove for any defects caused to the stove (hereinafter referred to as "Product") due to faulty materials/ workmanship for a period of one (1) year from the date of shipment to the original end user. Any such defects occurring to the Product during this period shall be repaired free of charge at NDMI's manufacturing centre. The discretion to repair or replace such defective product lies with NDMI solely. NDMI will be responsible for damages caused during shipment to the place of delivery.

#### Claim Procedure:

Return the defective product to an authorized NDMI distributor with the shipment charges prepaid. To obtain service under this warranty, provide the distributor's name, address and contact details along with the proof of date and place of purchase. The returned product must also include the detailed reason for failure. NDMI will pay the return shipping charges if the repairs are covered by the warranty.

#### The warranty is not valid if:

- a. The warranty card is not completed in all respects by the distributor immediately after the purchase.
- b. The product is not properly used as per instructions in the user manual
- c. The defect is due to damage caused by incorrect use and poor maintenance
- d. Due to excessive moisture or unfavourable climatic conditions, staining, rusting or bacterial growth appears
- e. Alterations / repairs have been made by people not authorized by NDMI The product is used for commercial purpose, other than
- f. Damages caused due to act of nature such as lightning and weather extremes.

The warranty does not cover any defect caused to the external appearance and paint during usage, handling or shipment external appearance including but not limited to paint and finish.NDMI will not be entitled to pay for consequential or incidental damages of any kind, including but not limited to loss profits, goodwill or damage to equipment or property, under this warranty. There will be no expressed or implied warranties, including merchantability and fitness for a particular purpose, under this written warranty.